


The result of each operation is indicated by the lighting up of the LED indicators on the upper section of the unit, and by the sounding of the buzzer.

Input the master code twice.

(Default: 1 2 3 4 1 2 3 4)

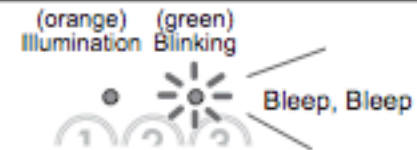

**I Setting the code length**  
(Default: 4 digits)

**II Setting the master code**  
(Default : 1234)

**III Setting the code**  
group 1

group 2

Input the setting code.

A 3



Input the setting code.

A 4



00 - 59

Inputting of user number (ex.: 01)

0 1



60 - 99

Inputting of user number (ex.: 60)

6 0



Inputting of code length (ex.: 5 digits)  
4, 5, or 6 digits

5



Inputting of new master code  
(ex.: 4321)

4 3 2 1



 
Inputting of code (ex.: 1006)  
\* Numbers 0 - 9 and the letters A and B can be used

1 0 0 6



Inputting of code (ex.: 04B2)  
\* Numbers 0 - 9 and the letters A and B can be used

0 4 B 2



- When the (B) key is pressed, the green LED lights up, the buzzer beeps twice, and the system exits the setting mode.

(If the (B) key is included in the user code and the master code, the system does not exit the setting mode.)

- You can continue the setting up operation by entering an arbitrary setting code.

